

ROADMASTER BRACKETS

APPLICATIONS

P

In Section P:	Roadmaster Brackets	Demco Base Plates	Blue OX Base Plates
---------------	---------------------	-------------------	---------------------

BRACKET GUIDE CODES:

- XL) Pull Pin To Remove Arm
- EZ) Twist To Remove, .use part# 210 insert
- E22) Twist To Remove, .use part# 212 insert
- MS) Non-Removable Arm
- MX) Pull Pin To Remove Arm, No Crossbar
- N) New Bracket
- C) Change in Bracket
- S/O) Special Order
- MT) Manufacturing Time Allow 3-4 Weeks.

IMPORTANT

Dealer times can vary in individual situations based on installation experience, vehicle hoist, tools and vehicle options.

MX and MS brackets are only for use with motorhome mounted tow bars. They eliminate the need for the included QD crossbar. The MX and MS brackets will not work with a car mounted tow bar like the STOWMASTER, nor will they work with the Easy Hook Safety Cables, Guardian or any accessory that requires a Roadmaster QD crossbar.

Time Code Avg. Dealer Installation Time

- A2.0 Hours
- B2.5 Hours
- C3.0 Hours
- D3.5 Hours
- E4.0 Hours
- F4.5 Hours

Limited Supply

ROADMASTER BRACKET APPLICATIONS

MAKE / Model	Year	Comments	Type	Notes	Order	Kit#	Cost	Time*
ACURA								
MDX	01-06	No brushguard or lower bumper trim.	XL	47		39357	A	C
BUICK								
ENCLAVE	08-11	Fits all. No brushguard.	EZ	1		30674	A	C
RAINEER	04-07		XL	1		39188	A	B
CADILLAC								
ESCALADE	02-06	1/2 ton, 2wd & AWD, also fits EXT.	XL			39355	A	B
CHEVROLET								
AVALANCHE	02-06	1/2 ton, 4wd & 2wd. No factory b'guard.	XL			39355	A	B
AVALANCHE	07-11	Fits 1500 2wd, 4wd, LS, LT & LTZ. No brushguard.	XL	3		30700	A	A
AVALANCHE	07-11	Fits 1500 2wd, 4wd, LS, LT & LTZ. No brushguard.	MX	3,37		30701	A	A
COBALT	05-10	Fits all except S.S. models & sport models. Cobalts with grill inserts.	E22	1,45		30446	A	B
COLORADO	04-09	Includes Z71. No Xtreme or 5.7 engine.	XL	50		39915	A	B
HHR	06-11	Fits with foglights. No SS type.	XL	1		30441	A	B
MALIBU	97-03	194-1	XL	40		38416	A	A
MALIBU	97-03	NEW! 194-3	XL	40		38765	A	A
MALIBU	04-07	Fits LS, LT, Maxx & LTZ and SS models.	E22	1		39781	A	C
MALIBU	08-11	NEW! Fits LS, LT, LTZ and Hybrid.	E22	1		31681	A	B
MALIBU CLASSIC	04-05	NEW! 194-3	XL			38765	A	A
S10 BLAZER MID-SIZE	95-05	4wd only, 2dr & 4dr. No ZR2.	XL	30		38227	A	B
S10 BLAZER MID-SIZE	95-05	2wd only & 2dr only. No ZR2.				38219	W	C
S10 PICK-UP	94-03	4wd only, Trail Blazer ok. No ZR2.	XL	30		38227	A	B
S10 PICK-UP	94-03	2wd only, no Xtreme & no ZR2.				38219	W	C
S10 PICK-UP	04	Crew Cab 4WD LS. No ZR2.	XL			38227	A	B
SILVERADO 1500	99-02	1500 Heavy Duty.	MX	37		39088	A	B
SILVERADO 1500	99-02	1/2 ton, 4wd, Silverado, Z71.	XL			38767	A	B
SILVERADO 1500	03-06	1500 and Z71 w/torsion bar. No HD or SS.	XL			39355	A	A
SILVERADO 1500	03-06	1500, 2wd with coiled springs. No SS.	XL			30434	A	A
SILVERADO 1500	03-06	1500 HD, 2500, 3500. No SS.	MX	37		39893	A	A
SILVERADO 1500	03-06	1500 HD, 2500, 3500. No SS.	XL			39879	A	A
SILVERADO 1500	07-11	Fits new style 2wd & 4wd.	MX	1, 37		30701	A	A
SILVERADO 1500	07-11	Fits new style 2wd & 4wd.	XL	1		30700	A	A
SILVERADO 2500	99-02	3/4 ton 4wd Silverado 2500.	MX	37		39088	A	B
SILVERADO 2500	03-06	1500 HD, 2500, 3500. No SS.	XL			39879	A	A
SILVERADO 2500	03-06	1500 HD, 2500, 3500. No SS.	MX	37		39893	A	A
SILVERADO 3500	03-06	1500 HD, 2500, 3500. No SS.	XL			39879	A	A
SILVERADO 3500	03-06	1500 HD, 2500, 3500. No SS.	MX	37		39893	A	A
SILVERADO CLASSIC	07	1500 and Z71 w/torsion bar. No HD or SS.	XL			39355	A	A
SILVERADO CLASSIC	07	1500, 2wd with coiled springs. No SS.	XL			30434	A	A
SILVERADO CLASSIC	07	1500 HD, 2500, 3500. No SS.	MX	37		39893	A	A
SILVERADO CLASSIC	07	1500 HD, 2500, 3500. No SS.	XL			39879	A	A
SUBURBAN	03-06	1500, LS, LT, Z71	XL			39355	A	A
SUBURBAN	03-10	2500, LS, LT. No brushguard.	XL	1		39879	A	A
SUBURBAN	03-10	2500, LS, LT. No brushguard.	MX	1, 37		39893	A	A
SUBURBAN	07-11	Fits 1500 2wd, 4wd, LS, LT & LTZ. No brushguard.	XL	3		30700	A	A
SUBURBAN	07-11	Fits 1500 2wd, 4wd, LS, LT & LTZ. No brushguard.	MX	3, 37		30701	A	A
TAHOE	03-04	2wd with coiled springs.	XL			30434	A	A
TAHOE	03-06	4wd and 2wd with torsion bars.	XL			39355	A	A
TAHOE	07-11	Fits 2wd, 4wd, LS, LT & LTZ. No b'guard, Hybrid or Z71 Off Road Package.	XL	3		30700	A	A
TAHOE	07-11	Fits 2wd, 4wd, LS, LT & LTZ. No b'guard, Hybrid or Z71 Off Road Package.	MX	3, 37		30701	A	A

◆ Not UPS-able; LS Limited Supply

In Section P:	Roadmaster Brackets	Demco Base Plates	Blue OX Base Plates					
ROADMASTER BRACKET APPLICATIONS								
MAKE / Model	Year	Comments	Type	Notes	Order	Kit#	Cost	Time*
CHEVROLET (continued)								
TRACKER	99-04	2dr & 4dr, okay with skidplate, no bumper guard.	XL			38760	A	C
TRAIL BLAZER	02-09	Relocate transmission cooler if required. No SS.	XL	1		39188	A	B
CHRYSLER								
PT CRUISER	01-10	Fits Turbo.	XL	1		30080	A	C
DODGE								
CARAVAN	05-07	Fits Grand	XL	1		30437	A	C
DURANGO	01-03	4wd only, no brushguard.	XL			39081	A	A
PICK-UP DAKOTA	01-04	4wd only, no brushguard.	XL			39081	A	A
PICK-UP DAKOTA	05-11	2wd and 4wd.	EZ	3		30445	A	A
PICK-UP RAM 1500	02-05	Fits with or without tow hooks. No SRT-10.	XL	1		39615	A	B
PICK-UP RAM 1500 MEGA CAB	06-08	Fits with or without tow hooks. No SRT-10.	XL			31224	A	A
PICK-UP RAM 2500	03-11	2wd, 4wd, Mega cab ok. Fits with or without tow hook. No Power Wagon.	XL			31224	A	A
FORD								
EDGE	07-10	Fits all.	XL	1		30702	A	A
ESCAPE	08	Fits all with manual transmission.	XL	3		31225	A	A
ESCAPE HYBRID	08	2wd & 4wd.	XL	3		31225	A	A
EXPLORER	95-98	No Limited & Special Edition. (Ok Eddie Bauer, XLT, 2 & 4 door).	XL	1		38242	A	B
EXPLORER	99-01	XLT & limited, Eddie Bauer.	XL	1		38775	A	B
EXPLORER	02-05		XL			39138	A	A
EXPLORER	06-10	XLT, Eddie Bauer & Limited.	XL	1		30444	A	A
EXPLORER SPORT	99-00		XL	1		38775	A	B
EXPLORER SPORT TRAC	07-10	Fits XLT and Limited. No Adrenalin.	XL	1		30444	A	A
F-150	96.5-03	F150, no harley davidson, lightning or STX.	XL	1		39635	A	A
F-150	04-10	2wd & 4wd, King Ranch, Sport & 09-10 STX okay. No H' Davidson, Lightning, STX or Raptor.	XL	1		39916	A	A
F-150 HERITAGE	04	F-150 2wd Heritage only.	XL	1		39635	A	A
RANGER EDGE	01-05	2 & 4 wd. No Skidplate, no tremor. Must have tow hooks.	XL			39886	A	B
RANGER PICK-UP	98-06	4wd, XLT & XL. No STX or rockguard.	XL	1		39878	A	A
RANGER PICK-UP	06-10	2wd Sport only.	XL			39886	A	B
RANGER PICK-UP	07-10	2wd XLT & XL. No Sport.	XL	1		31228	A	B
RANGER PICK-UP	07-11	4wd fits all.	XL			39886	A	B
RANGER STX	05-07	Fits all 2wd STX models.	XL	1		31228	A	B
GEO								
TRACKER	99-04	2dr & 4dr, okay with skidplate, no brushguard.	XL			38760	A	C
TRACKER 2DR ONLY	96-98	Also fits With Skid Plate Or Gsi, No brushguard.	XL			38371	A	C
GMC								
ACADIA	07-11	No brushguard or 2011 Acadia Denali.	EZ	1,49		30674	A	C
CANYON	04-09	Includes Z71 & 5.3 engine. No Xtreme.	XL	50		39915	A	B
ENVOY	02-09	Also fits XUV. No Envoy Denali.	XL			39186	A	B
ENVOY DENALI	05-09	Includes XL.	XL	1		39188	A	B
JIMMY	03-05	No ZR2 or Xtreme.	XL			38227	A	A
S15 JIMMY ENVOY	98-01	Mid size, no Black Diamond or ZR2 or Xtreme.	XL	30		38227	A	B
S15 JIMMY MID SIZE	95-01	4wd only. No Black Diamond, ZR2 or Xtreme.	XL	1, 30		38227	A	B
S15 JIMMY MID SIZE	95-01	2wd only & 2dr only. No ZR2 or Xtreme.				38219	W	C
S15 PICK-UP	94-03	4wd & Sonoma. No Hi-rider or ZR2 or Xtreme.	XL	1, 30		38227	A	B
S15 PICK-UP	94-03	Includes Sonoma, 2wd only. No ZR2 or Xtreme.				38219	W	C
S15 PICK-UP	04	SLS crewcab 4wd. No highrider or ZR2 or Xtreme.	XL			38227	A	A
SIERRA 1500	99-02	1500 Heavy Duty.	MX	37		39088	A	B
SIERRA 1500	99-02	1/2 ton, 4wd, Sierra only.	XL			38767	A	B
SIERRA 1500	03-06	1500 with torsion bar, No HD or SS.	XL			39355	A	A
SIERRA 1500	03-06	1500 with coiled springs, No HD or SS.	XL			30434	A	A
SIERRA 1500	07-11	Fits new style 2wd & 4wd.	MX	1, 37		30701	A	A
SIERRA 1500	07-11	Fits new style 2wd & 4wd.	XL	1		30700	A	A
SIERRA 1500 HD	03-06	1500 HD, 2500, 3500. No SS.	XL			39879	A	A
SIERRA 1500 HD	03-06	1500 HD, 2500, 3500. No SS.	MX	37		39893	A	A
SIERRA 2500	99-02	3/4 ton 4wd Sierra 2500.	MX	37		39088	A	B
SIERRA 2500	03-06	1500 HD, 2500, 3500. No SS.	XL			39879	A	A

ROADMASTER BRACKETS

APPLICATIONS


P

In Section P:	Roadmaster Brackets	Demco Base Plates	Blue OX Base Plates
ROADMASTER BRACKET APPLICATIONS			
MAKE / Model	Year	Comments	Type Notes Order Kit# Cost Time*
GMC (continued)			
SIERRA 2500	03-06	1500 HD, 2500, 3500. No SS.	MX 37 39893 A A
SIERRA 3500	03-06	1500 HD, 2500, 3500. No SS.	XL 39879 A A
SIERRA 3500	03-06	1500 HD, 2500, 3500. No SS.	MX 37 39893 A A
SIERRA CLASSIC	07	1500 HD, 2500, 3500. No SS.	XL 39879 A A
SIERRA CLASSIC	07	1500 with torsion bar, no HD or SS.	XL 39355 A A
SIERRA CLASSIC	07	1500 with coiled springs. No HD or SS.	XL 30434 A A
SIERRA CLASSIC	07	1500 HD, 2500, 3500. No SS.	MX 37 39893 A A
YUKON	03-06	2wd & 4wd also XL 1/2 ton.	XL 39355 A A
YUKON	03-07	XL 3/4 ton and Quadra Steer.	XL 39879 A A
YUKON	03-07	XL 3/4 ton and Quadra Steer.	MX 37 39893 A A
YUKON	07-11	Fits 1500 2wd & 4wd. XL okay. No brushguard.	XL 1 30700 A A
YUKON	07-11	Fits 1500 2wd & 4wd. XL okay. No brushguard.	MX 1, 37 30701 A A
YUKON DENALI	03-06	Also XL Denali.	XL 39355 A A
HONDA			
ACCORD	94-97	4 cyl.	XL 1 38216 A A
ACCORD	98-07	No Hybrids.	XL 1 39578 A C
CRV	97-01		XL 1 38763 A A
CRV	02-04	Without brushguard.	XL 39342 A C
CRV	05-06	No brushguard or extra trim package.	XL 1 30072 A C
CRV	07-11	2wd & 4wd okay. Fits US & Japan built. No brushguard.	XL 1 30537 A C
ELEMENT	03-06	No EX-P. Check towability w/manufacturer.	XL 39342 A C
FIT	07-08	Bracket box date must be 3/31/08 & newer to fit with foglights. Check towability w/manufacturer.	EZ2 1 31229 A B
ODYSSEY	94-98	4 cyl. (Canada only)	XL 38216 A A
ODYSSEY	99-04	No tow package trans. cooler.	XL 39564 A C
PILOT	03-05	No brushguard.	XL 39357 A C
HUMMER			
H2	03-09		XL 39882 A A
H3	06-07	Factory b'guard and H3X okay. No Alpha.	XL 3 30435 A B
ISUZU			
ASCENDER	03-08		XL 39188 A B
OASIS	94-99	4 cyl. (Canada only)	XL 38216 A A
PICK-UP I350	06		XL 50 39915 A B
JEEP			
CHEROKEE	84-90	With & without brushguard, also fits laredo.	1 38205 W B
CHEROKEE	91-01	W/o brushguard, fits laredo, country, sport, limited.	XL 1, 25 38417 A B
CHEROKEE	97-01	Without brushguard, also fits laredo, country, sport.	1, 25 38532 W B
COMANCHE	84-92	2wd & 4wd.	1 38205 W B
COMMANDER	06-10	Fits Limited.	XL 1 30073 A A
COMMANDER	06-10	Fits Limited.	MX 1,37 30534 A A
GRAND CHEROKEE	93-98	Also fits laredo & limited.	XL 14 38210 A B
GRAND CHEROKEE	99-00	Laredo, limited, 6&8cyl, no b'guard.	XL 1 38946 A B
GRAND CHEROKEE	01-03	Also fits limited, no brush guards.	XL 39052 A B
GRAND CHEROKEE	04		XL 39611 A B
GRAND CHEROKEE	05-10	No Brushguard or SRT-8. Fits Hemi & Diesel.	XL 30073 A A
GRAND CHEROKEE	05-10	No Brushguard or SRT-8. Fits Hemi & Diesel	MX 37 30534 A A
GRAND CHEROKEE	2011	NEW! Fits Grand Cherokee with no tow hooks or adaptive cruise control sensor.	EZ 1, 3 31851 A C
GRAND WAGONEER	93-98		XL 14 38210 A B
LIBERTY	02-05	No b'guard. 05 may req. trimming. Diesel ok.	XL 14 39190 A C
LIBERTY	02-07	No b'guard. 05 & later may req trimming. Diesel ok.	EZ 1, 14 39877 A C
LIBERTY	08-11	Fits Limited and Sport. No brushguard, rockguard or skid plate package.	EZ 1 30848 A C
WAGONEER	84-92	No grand.	1, 14 38205 W B
WRANGLER	96-97	U-channel bumper only.	1, 7 38211 W A
WRANGLER	96-06	Includes Unlimited, Rubicon & double tube bumper. No front leaf springs.	XL 44 39593 A B
WRANGLER	98-02	U-channel bumper only.	1,34 38531 W B
WRANGLER	99-02	U-channel or single tube bumper only.	XL 44 38989 A B
WRANGLER	07-09	Fits all 2 & 4 door models. No aftermarket bumpers winches or guards.	XL 3,51 30850 A A

◆ Not UPS-able; LS Limited Supply

In Section P:	Roadmaster Brackets	Demco Base Plates	Blue OX Base Plates					
ROADMASTER BRACKET APPLICATIONS								
MAKE / Model	Year	Comments	Type	Notes	Order	Kit#	Cost	Time*
JEEP (continued)								
WRANGLER	07-09	Fits all 2 & 4 door models. No aftermarket bumpers.	MX	3, 37,51		31231	A	B
LINCOLN								
MKX	07-10	Fits all.	XL	1		30702	A	A
MAZDA								
PICK-UP B-SERIES	98-08	4wd & 2wd.	XL	1		39878	A	A
MERCEDEZ-BENZ								
SMART FORTWO	08-10	Fits all except the Brabus.	EZ2	1		31442	A	E
MERCURY								
MOUNTAINEER	96-97		XL	1		38242	A	B
MOUNTAINEER	99-01		XL			38775	A	B
MITSUBISHI								
RAIDER	06-09	4wd.	EZ	3		30445	A	A
OLDSMOBILE								
BRAVADA	95-01	Notes 1, 2 et 30.	XL	1,30		38227	A	B
CUTLASS	97-99	NEW! 194-3 all	XL	1, 40		38765	A	A
ALERO	99-04	NEW! 194-3	XL	1, 40		38765	A	A
PONTIAC								
G6	05-09	Fits all except GXP & convertibles. Will not fit 09 models with new mid-year revised fascia.	XL	1, 3		30438	A	C
GRAND AM SE	99-05	NEW! 194-3	XL	1, 40		38765	A	A
PURSUIT	05-07	Fits SE sedan. No coupes or GT models.	EZ2	1		30446	A	B
SATURN								
AURA	07-09	Fits XE, XR and Hybrids.	EZ2	1		30533	A	B
ION	05-07	Fits all except Redlines & Exterior Perf. Package.	XL	1, 3		30439	A	B
ION	05-07	Fits all except Redlines & Exterior Perf. Package.	MX	1,3,37		30538	A	B
L-SERIES	00-02	sedans & wagons.	EZ			38858	A	B
L-SERIES	03-05	sedans & wagons.	EZ2			39562	A	A
OUTLOOK	07-10	Fits all. No brushguard.	EZ	1		30674	A	C
SC1	93-94	2dr.	XL	1		38220	A	A
SL1 & SL2	91-95		XL	1		38220	A	A
SL1 & SL2	00-02		XL			38220	A	A
STATION WAGON	92-95	SW1 & SW2.	XL	1		38220	A	A
STATION WAGON	00	SW1 & SW2.	XL	1		38220	A	A
VUE	02-03	check owner manual for towability.	XL			39384	A	A
VUE	04-05	Four cylinder only. No Redline or V6 models.	XL			39384	A	A
VUE	04-07	V6 only, no redline or factory brushguard.	XL	1, 49		39780	A	A
VUE	06-07	4-Cyl. No V6, Redline or brushguard.	XL	49		30440	A	B
VUE	08-10	Fits all. No Brushguard.	XL	1		30735	A	B
VUE GREEN LINE HYBRID	07	No brushguard.	XL	49		30440	A	B
SCION								
XD	08-10		EZ	1,3		31227	A	D
SMART								
SMART FORTWO	08-10	Fits all.	EZ2	1		31442	A	E
SUZUKI								
GRAND VITARA	06-08		XL	1		30430	A	B
VITARA	99-04	All.	XL			38760	A	C
TOYOTA								
COROLLA	03-08	fits CE, LE, S & SRX.	XL	1		39883	A	C
PICK-UP TACOMA	05-10	2wd, 4wd & PreRunner. No X-Runner.	XL			30432	A	A
SCION XD	08-10		EZ	1,3		31227	A	D
YARIS	06-08	Fits Canadian 3 & 4 door CE & RS hatchback models. No Australian models.	EZ	1		31226	A	D
YARIS	07-10	Fits sedan and hatchback models No Australian models.	EZ	1		31227	A	D
YARIS	07-10	Fits all 3 door hatchback U.S. models. No Australian models.	EZ	1		31226	A	D
VOLKSWAGEN								
GOLF	00-03	Turbo ok.	EZ	1		39885	A	E
JETTA	99-02	GTI, TDI, diesel.	EZ			39885	A	E

In Section P:	Roadmaster Brackets	Demco Base Plates	Blue OX Base Plates
---------------	---------------------	-------------------	---------------------

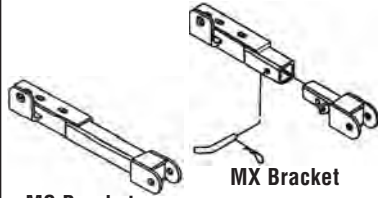

Tow bar rating must exceed actual weight of towed vehicle fully loaded.

MX and **MS** brackets are only for use with motorhome mounted tow bars. They eliminate the need for the included QD crossbar. The MX and MS brackets will not work with a car mounted tow bar like the STOWMASTER, nor will they work with the Easy Hook Safety Cables, Guardian or any accessory that requires a Roadmaster QD crossbar.

ROADMASTER FOOTNOTES:

- Trimming of spoiler, air dam or plastic fascia may be required on some models of this vehicle.
- Trimming the lower air dam, air deflector, cowling and/or rock guard is required on this model.
- A) Most Renegades & Wranglers** utilize a steel bumper that is shaped like a "U". The steel bumper has a flat top & face, which the **38208** (1409-3) or **38207** (1409-1) brackets bolt to. However, some versions incorporate bumpers without a flat face & top which prevent the use of these brackets.
- B) '98 Jeep Wrangler** uses **38531** (1417-1), if the front bumper has bumperettes.
- Add 1.5 hours if vehicle has tow hooks. Hooks & brackets must be removed in order for brackets to fit.
- On the 91-96 Jeep Cherokees**, the plastic under the bumper must be trimmed & a small bumper strap needs to be cut. All **38417** (1418-1) & **38532** (1418-3) made before 9/8/97 WILL NOT FIT Cherokees with tow hooks.
- Some vehicles will require Quick-Disconnect brackets for the additional space needed for TRACKER tow bar to fit properly.
- Trimming of horizontal rib in lower grille is necessary on 98 & newer Plymouth Voyagers.
- Jeeps with factory fog lights will have to move fog lights 1" out from the stock position to clear mounting hardware.
- This bracket will accommodate any ROADMASTER motorhome mounted tow bar. This bracket is designed for heavier vehicles. Make sure the tow bar you use exceed the weight of the vehicle to be towed when full loaded. Anchor brackets for Sterling cables WILL NOT FIT MX or MS style brackets. To use MX or MS bracket with Sterling tow bar, the Sterling cable anchors must be attached to the frame of the vehicle or welded to the receiver portion of the bracket.
- ON 2002 MODELS ONLY:** need to check for sub-frame mounting bolts. These bolts are located under a splash panel behind the bumper. These bolts hold the engine cradle to the main frame. If these bolts are present, use a 194 series bracket.
- No right hand drive/steering.
- This bracket will not fit with the bumper fasia on the AJ or AK Body Styles.
- On 2006 Acura MDX Models only: Must check tow ability with manufacturer.
- Special tools required – see instructions.
- Please review the supplemental page located in the back of instructions if the vehicle is equipped with the auxiliary pump.
- Will not work with optional Mopar skid plate.

IMAGE 1

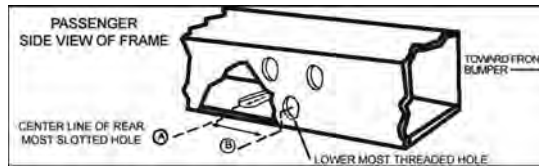


CHART 1

CHART 1 (see Chart 3) If measurement is:	5000 lb. Bracket	5000 lb. XL Bracket	8000 lb. XL Bracket
Approximately 1-1/4"	S/O #131-2	S/O #131-17	S/O #131-3
Approximately 3"	S/O #131-1	S/O #131-15	S/O #131-8

CHART 2

CHART 2 (see Chart 3)	5000 lb. XL Bracket	8000 lb. MX Bracket
1/2 ton 2WD	#199-8/199-1	#199-9/199-3
1/2 ton 4WD	38767 #199-1	S/O #199-3
3/4 ton 4WD	N/A	S/O #3101-1
3/4 ton 2WD	S/O #199-8	S/O #3101-1

CHART 3

CHART 3 KIT #		Type	Cost	Time
S/O	131-1		S	C
S/O	131-2		O	C
S/O	131-3	MX	A	C
S/O	131-8	MX	A	C
S/O	131-15	XL	A	C
S/O	131-17	XL	A	C
38767	199-1	XL	A	B
S/O	199-3	MX	A	B
S/O	199-8	XL	A	B
39355	199-5	MX	A	B
39088	3101-1	MX	A	B

